Connector to Harness Index

Engine Wire Harness (’98-99 V6 models)

Ref	Connector or Terminal	Cavities/ Color	Location	Connects to	Notes
1	VTEC oil pressure switch	2-GRY	Underside of vehicle, right rear of engine		
2	Oil pressure switch	1-NAT	Underside of vehicle, right rear of engine		
3	VTEC solenoid valve	1-GRY	Underside of vehicle, right rear of engine		
4	T101		Inside under-hood fuse/relay box		
5	CKP sensor	2-GRY	Underside of vehicle, right rear of engine		
6	Fuel injector No. 4	2-BLK	Top of engine		
7	Fuel injector No. 5	2-BLK	Top of engine		
8	Fuel injector No. 6	2-BLK	Top of engine		
9	Fuel injector No. 1	2-BLK	Top of engine		
10	C105 Junction connector	20-BLK	Below right side of dash		
11	PCM connector D	16-GRY	Below center of dash, right side of heater unit		
12	PCM connector B	25-GRY	Below center of dash, right side of heater unit		
13	Fuel injector No. 2	2-BLK	Top of engine		
14	PCM connector C	31-BLU	Below center of dash, right side of heater unit		
15	Primary HO2S	4-GRY	Lower rear center of engine compartment		
16	Fuel injector No. 3	2-BLK	Top of engine		
17	IAT sensor	2-GRY	Left rear of engine		
18	Transmission range switch	10-GRY	Left rear of engine compartment		
19	ICM	3-—	Left side of engine compartment		
20	Countershaft speed sensor	2-BLK	Lower left rear of engine compartment		
21	C106 Junction connector	8-GRY	Lower left rear of engine compartment		
22	Ignition coil	3-BLK	Left side of engine		
23	C103	14-GRY	Left rear of engine compartment	Left-side engine compartment wire harness (see page 203-14)	
24	C104	10-GRY	Left rear of engine compartment	Left-side engine compartment wire harness (see page 203-14)	
25	Radiator fan switch A	2-GRY	Left side of engine		
26	G101		Left side of engine	Engine ground via engine wire harness	
27	A/T clutch pressure control solenoid valve A	2-BRN	Left side of engine compartment		
28	A/T clutch pressure control solenoid valve B	2-BLK	Left side of engine compartment		
29	Mainshaft speed sensor	2-BLK	Underside of vehicle, front of transmission		
30	3rd clutch pressure switch	1-BLK	Underside of vehicle, front of transmission		
31	Starter solenoid	1-BLK	Left front of engine compartment		
32	Torque converter clutch solenoid valve/shift control solenoid valve A	3-GRY	Left side of engine compartment		
33	2nd clutch pressure switch	1-BLK	Lower left side of engine on transaxle		
34	Shift control solenoid valve C	2-BRN	Underside of vehicle, front of transmission		
35	IAC valve	3-GRY	Left side of engine		
36	Shift control solenoid valve B	2-BLK	Underside of vehicle, front of transmission		
37	TP sensor	3-GRY	Left side of engine		
38	MAP sensor	3-GRY	Top of engine		
39	ECT sensor	2-GRY	Left side of engine		
40	EGR valve and EGR valve position sensor	6-GRY	Left side of engine		
41	Coolant temperature gauge sending unit	1-GRY	Left side of engine		
42	Distributor	3-BLK	Left rear of engine		
43	Alternator	4-LT GRN	Right front of engine		
44	T102		Right front of engine	Alternator	
45	TDC sensor (1 and 2)	4-GRY	Right side of engine		
46	Radiator fan switch B	2-GRY	Right side of engine		

©2002 American Honda Motor Co., Inc.

Connector to Harness Index

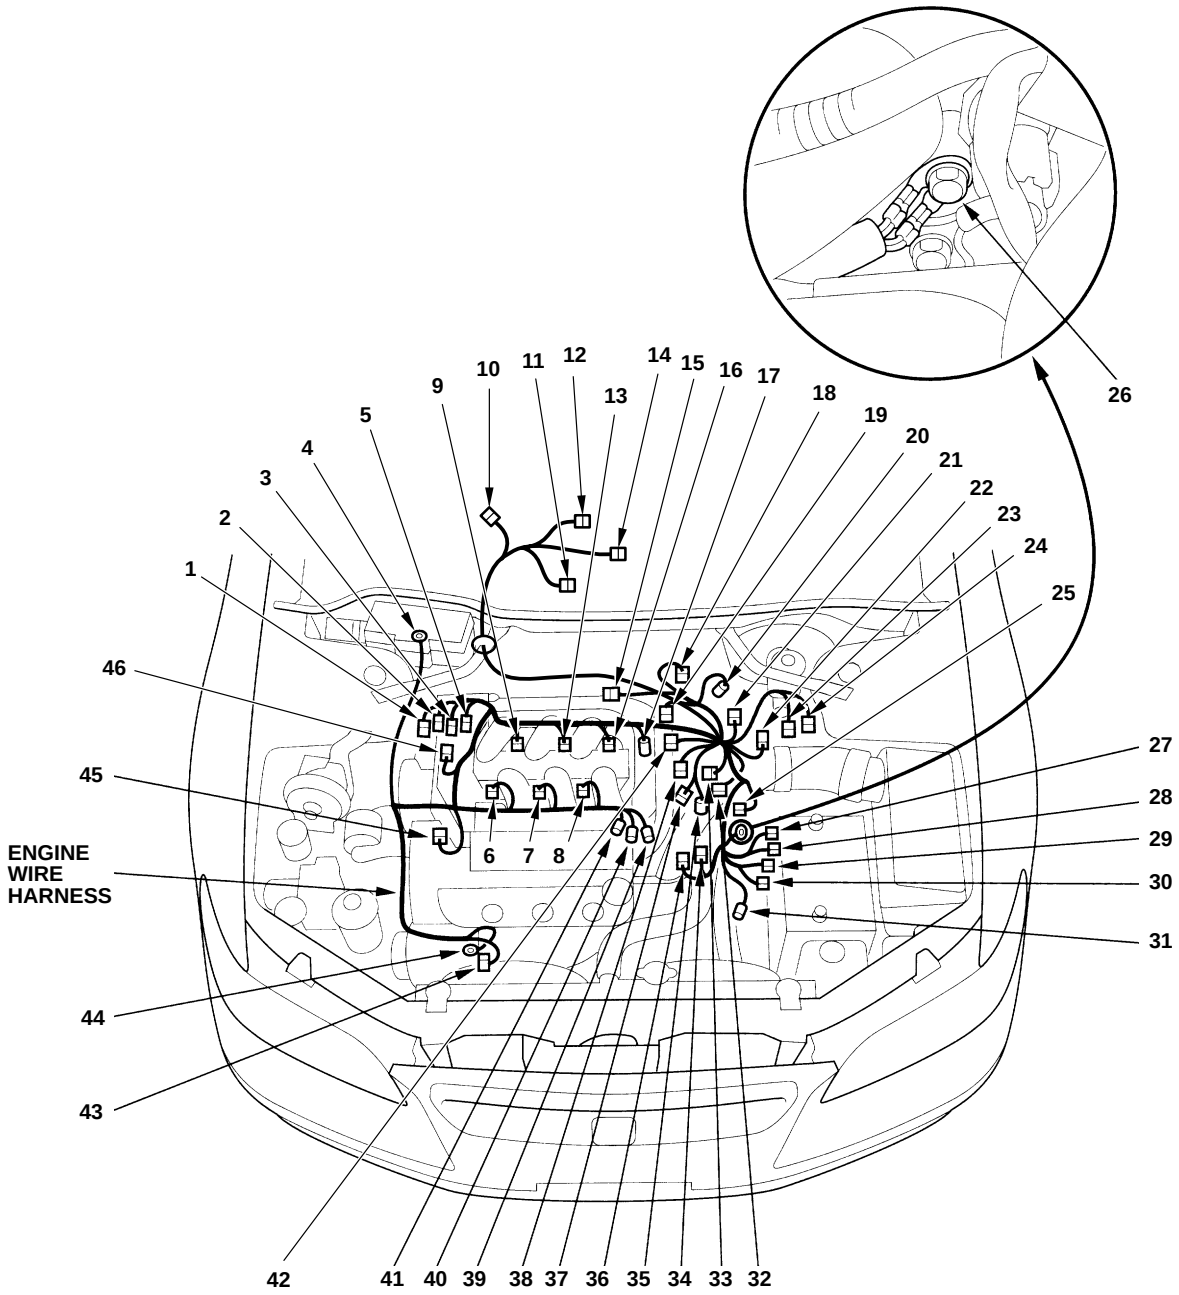

©2002 American Honda Motor Co., Inc.